

Instruction Sheet

Follow these instructions to update the software.

Subject: Sonic MHL Software Update Instructions

**Models affected: MHL Holding Cabinets
11/16/2022**

1. With the cabinet powered up and fully booted up, slide the USB cover open and insert the USB drive in the front of the cabinet (see Figure 1).



Figure 1

2. After a few minutes the software update will start (see Figure 2).

Software update successful.

Unplug USB and reboot the unit

Figure 3

3. When the software update is complete the controller displays **Software update successful. Unplug USB and reboot the unit** when complete (see Figure 3).

4. Remove the USB from the front of the cabinet.
5. Power cycle the entire cabinet.

6. Press the  button. Press the  button. Swipe two times to the right to **System Information**. Verify:
 - UI software version is **UX-2425**
 - IoT software version is **N/A**
 - IO board software version is **0.7.7** (see Figure 4) on all displays.
 - Reader board (RFID) software version is **0.4.0**

7. Press the  button.

Press

8. Press the  button.

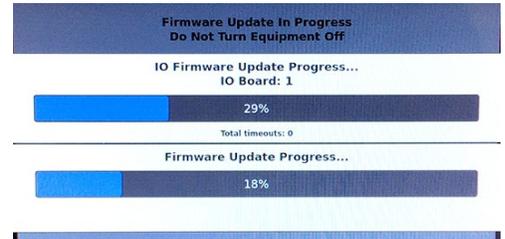


Figure 2

Firmware Versions

Board	Version
UI (Primary)	UX-2425
IoT	N.A.
Master I/O board	0.7.7
Reader board	0.4.0

Figure 4