

Instruction Sheet

Follow these instructions to update software or menu files on a CrispyMax Serving Station.

Subject: Updating the Software or Menu File Instructions

Models affected: CrispyMax Serving Stations

1. Ensure the power cord is connected to the wall.
2. Ensure the power switch on the front of the unit is in the **OFF** position (Indicator LED is off).
3. Position the unit to gain access the rear of the station.
4. Remove the two (2) screws of the left side (as viewed from the rear of the unit) (see Figure 1).
5. Slide the side slightly towards the rear of the unit (see Figure 2).
6. Lift up slightly towards the top of the unit as shown to remove the side (see Figure 3).
7. The USB port is now accessible (see Figure 4).
8. Insert the USB drive into the USB slot with the menu file.
9. The indicator LED will display (see Note below), when successful.
10. If the file was invalid or corrupt, the indicator LED will display continuous fast red pulses.
11. Remove the USB.
12. Reverse steps to reattach the side.
13. Switch on the power switch.

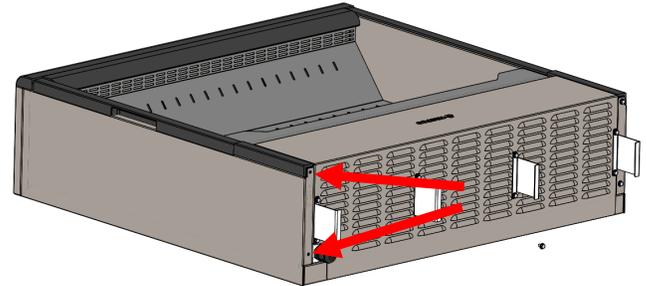


Figure 1

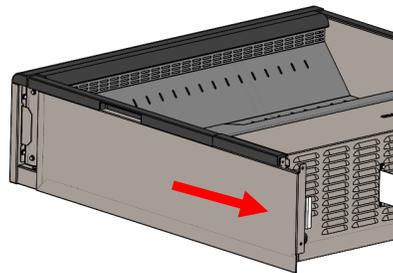


Figure 2

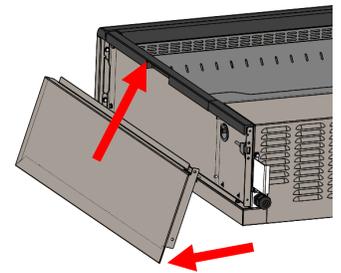


Figure 3

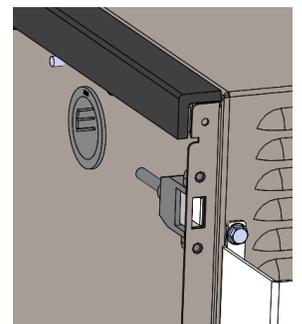


Figure 4

Note: The indicator LED will display:

- Fast continuous green pulses on units prior to serial number beginning with 2107 or before.
- Five (5) green pulses every 3 seconds on units after serial number beginning with 2108 or after.